

Instructions for using wing tip wheel

1. Assemble unit by inserting hinge pins (bent end goes forward) they are slightly bent to hold in place.
2. Select which wing, recommend up-wind wing for cross-wind.
3. Duct tape onto wing (36" roll provided)
4. Hold full opposite aileron (wheel gives ample clearance, so down aileron won't scrape ground)
5. I haven't seen any lateral problems at 65 knots (can't tell its there)
6. Remove from tip, disassemble, replace duct tape & stow away for next time.
7. Here's hoping you never have the occasion to use this device!

Good Soaring,

JJ Sinclair johnsinclair75@yahoo.com 530-621-2251